T06260" 0097E860

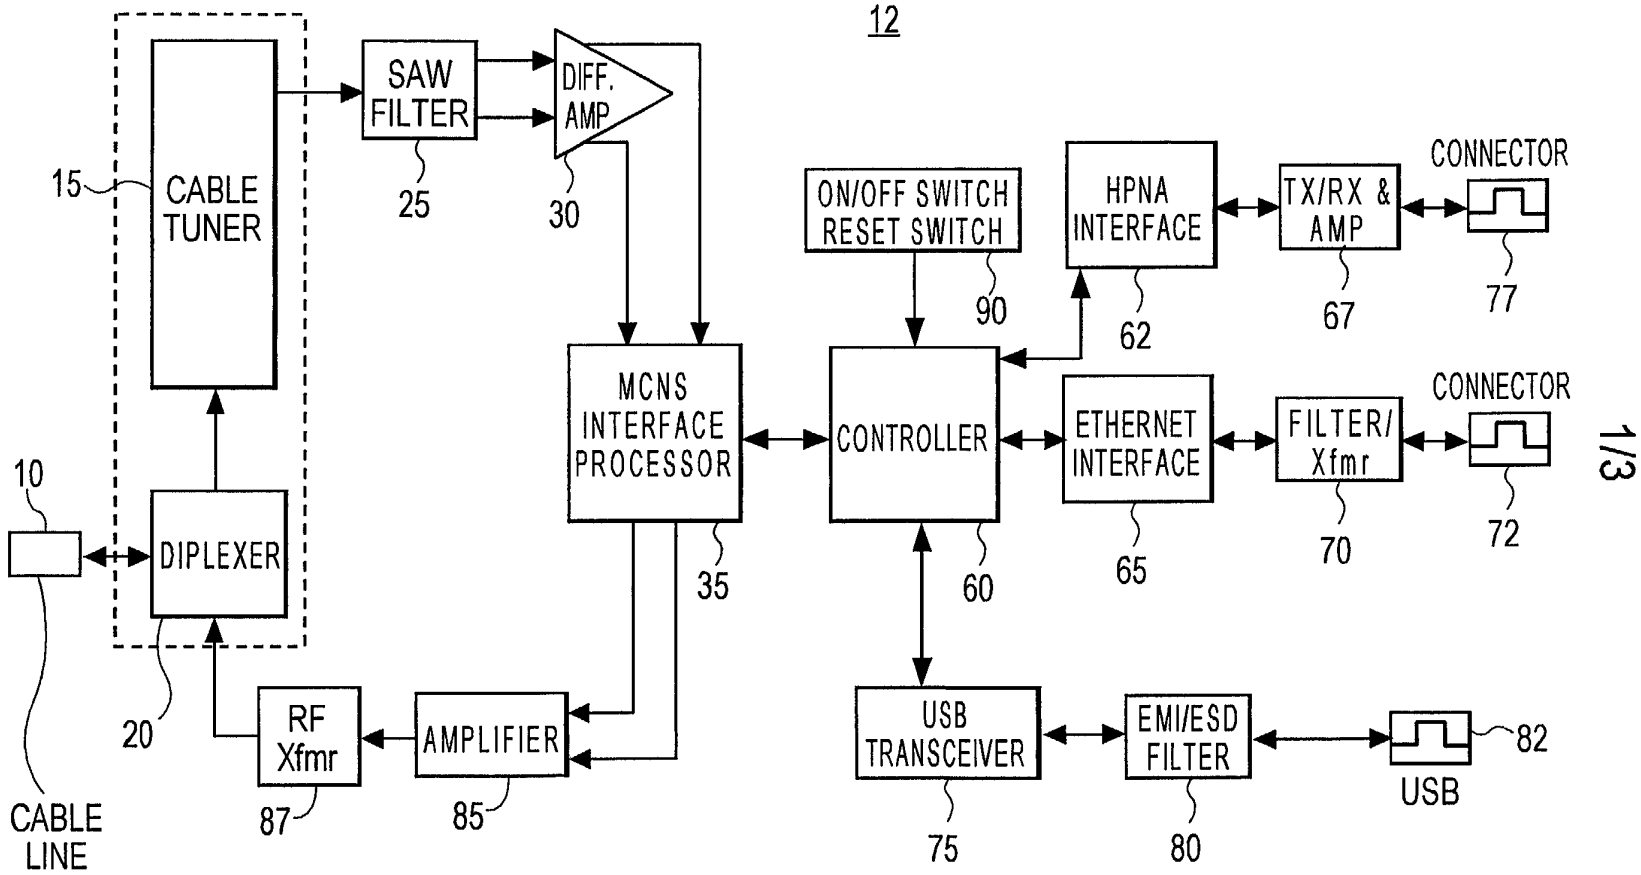



FIG. 1

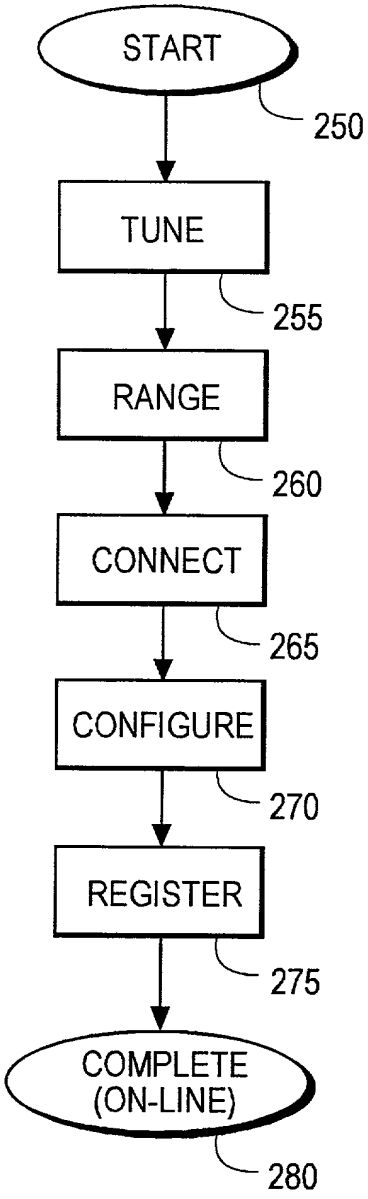

START
250
TUNE
255
RANGE
260
CONNECT
265
CONFIGURE
270
REGISTER
275
COMPLETE
(ON-LINE)
280

FIG. 2

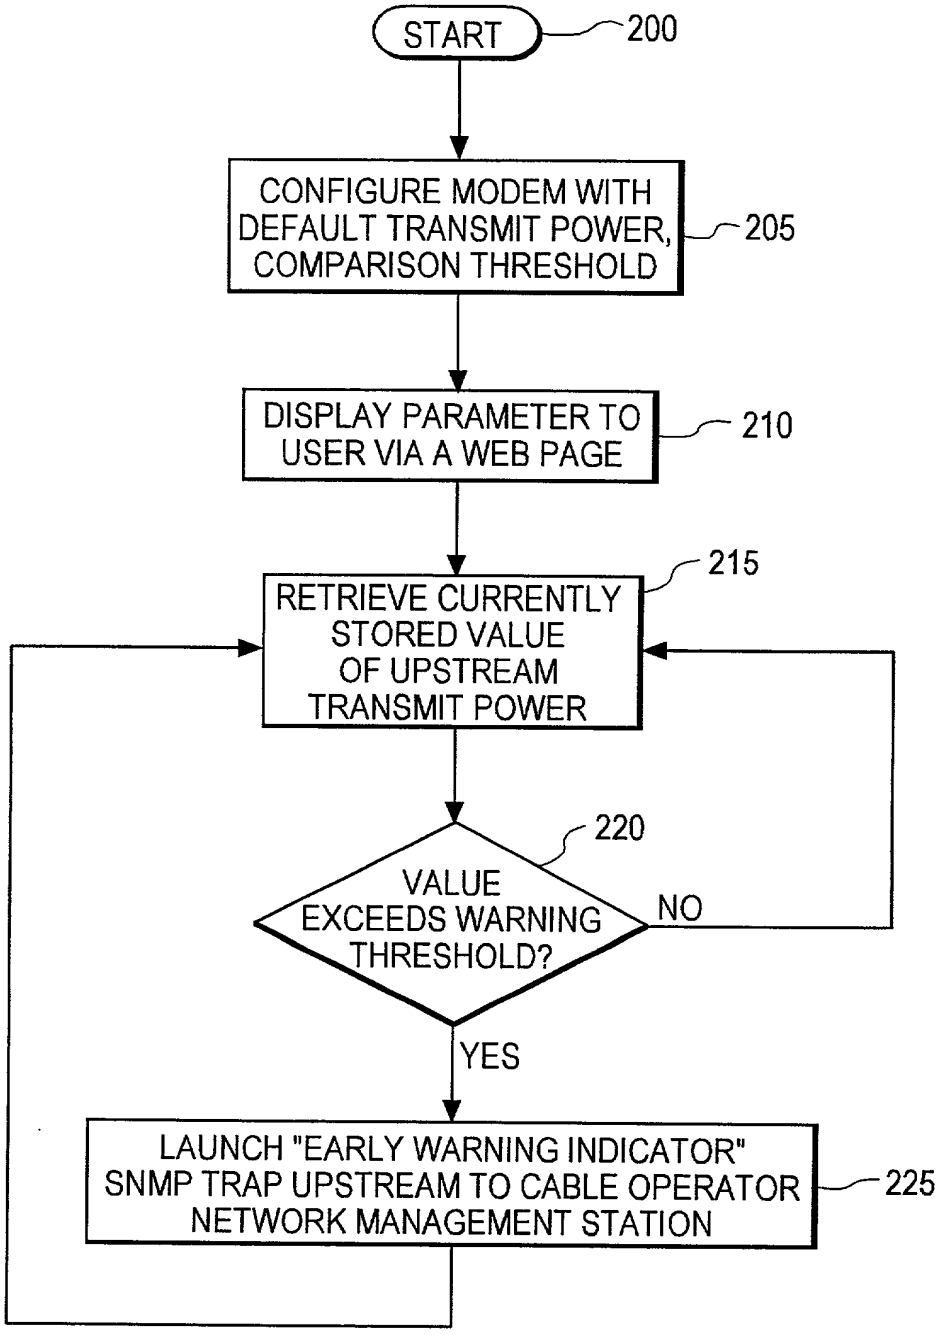

START
200
CONFIGURE MODEM WITH DEFAULT TRANSMIT POWER, COMPARISON THRESHOLD
205
DISPLAY PARAMETER TO USER VIA A WEB PAGE
210
215
RETRIEVE CURRENTLY STORED VALUE OF UPSTREAM TRANSMIT POWER
220
VALUE EXCEEDS WARNING THRESHOLD?
NO
YES
LAUNCH "EARLY WARNING INDICATOR" SNMP TRAP UPSTREAM TO CABLE OPERATOR NETWORK MANAGEMENT STATION
225

FIG. 3